

# INSTALLATION, USE AND CARE INSTRUCTIONS

**ventair<sup>tm</sup>**

THE AIR MOVEMENT SPECIALISTS

**EXHAUST FAN**

**Model No. PTBX200**



**BEFORE OPERATING THIS PRODUCT READ UNDERSTAND AND FOLLOW THESE  
INSTRUCTIONS.**

Save these instructions for future reference

This is a cut-out template card with size  $\Phi 240\text{mm}$  for the 200mm exhaust fan

This is a cut-out template card with size Φ240mm for the 200mm exhaust fan

**SAVE THESE INSTRUCTIONS**  
**IMPORTANT SAFEGUARDS**

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

**WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:**

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way.
- This unit is designed for indoor use only.
- Do not allow any foreign object to enter the grille openings as this may damage the unit and/or the user.
- Do not allow any ceiling insulation to cover any portion of the rear of the appliance.
- Do not attempt to modify the appliance.
- This unit is not suitable for use with exhaust ducting.

**INSTALLATION**

CAUTION: ALL ELECTRICAL WIRING MUST BE CARRIED OUT BY A LICENSED ELECTRICIAN.  
DO NOT INSTALL IN AN AREA WHERE WATER MAY BE SPLASHED ON THE APPLIANCE.

1. Check for hidden timbers and wiring above the installation area.
2. Using the template as described over, mark the mounting hole on the ceiling. In order for the warranty to be honoured the fan must be installed:
  - a. At least 2M above the ground.
  - b. At least 90cm from any hotplate and have at least 30cm clearance above the fan blades.
  - c. At least 20cm distance from side walls.
  - d. Ensure the power cord does not interfere with the fan blades.
  - e. Ensure any ceiling insulation or frame does not obstruct the airflow.
  - f. Clean the grille and blades regularly.
3. Cut the hole using a jigsaw, keyhole saw or hacksaw along the marked line.
4. Remove the grille (simply pulls free of the frame) and connect the plug to the power outlet. Insert the fan assembly into the opening. For ceilings 13mm or less use step a). For thicker ceilings use step b).
  - a) Before inserting the fan into the opening, push the three bar clamps all the way out to hold the fan in the ceiling. Push the fan into the ceiling opening and secure the exhaust fan by tightening the screws securely (See Fig ).
  - b) Remove the three bar clamps. Use wood screws (not supplied) to secure the fan to the ceiling. Locate screws in the 3 holes in the outer lip of the fan frame.
5. Place the grille over the fan assembly and push up until it snaps into place.
6. Precautions must be taken to avoid the back-flow of gases into the room from an open flue of gas or other open-fire appliances.



**CARE INSTRUCTIONS**

Dirty fan blades and clogged grille drastically decrease the fan's performance, working life and void the warranty. Regular cleaning will ensure many years' of trouble free operation. Switch the appliance off before removing the grille.

**GRILLE**

Remove and wash in warm soapy water then rinse. A soft brush and sugar soap is recommended to remove stubborn grease. Dry thoroughly before refitting.

**FAN BLADE**

Wipe blade with a cloth moistened with the above solution.

CAUTION: NEVER IMMERSE THE MOTOR IN CLEANING SOLUTION OR ANY OTHER LIQUID.

**MAINTAINENCE**

Apart from the grille and blade cleaning, there are no user serviceable components in the appliance.

**WARRANTY**

This Ventair Ceiling Exhaust Fan is warranted against defects in manufacturing and workmanship for a period of 3 years. The warranty does not extend to installation of the unit or any associated wiring or any other damage caused.

All fixed wiring must be completed by a licensed electrician and a suitable certificate of safety is to be issued. Warranty claims will be voided unless proof of purchase and a certificate of safety can be produced when required. Ventair will only replace the unit upon receipt of your faulty return to either the original point of sale or Ventair Head Office: 4 Capital Place, Carrum Downs, VIC, 3201.

All warranty claims require prior approval and must be lodged by visiting <https://ventair.com.au/warranty/> or contact us for general enquiries via email: [support@ventair.com.au](mailto:support@ventair.com.au)

**TEMPLATE**

Check that no hidden timbers or wiring are in the area immediately above the hole. This template will mark out a 240mm diameter hole for the 200mm fan

**Important Note**

The supply cord cannot be replaced. If the cord is damaged the appliance should be rejected.

**MAIN TECHNICAL PARAMETERS**

Input	Power	Noise	Air Volume	Hole-cutting Size	Model No
220-240V 50/60Hz	25W	39dB(A)	273m³/H	Φ240mm	PTBX200

Ventair is leading the Industry by ensuring all airflow data is gathered in accordance with International standard ISO 5801.

- \* Airflow volume listed may show both ISO and non ISO supplied data.
- Non ISO: Generic factory supplied data, not tested to strict international standards or guidelines and may vary according to individual manufacturers.
- ISO (International Organization for Standardization): An International standard tested under strict guidelines providing accurate data and commonly used in the professional specifying market.

**READ AND SAVE THESE INSTRUCTIONS**